



## Compatibility Chart for GV-AS Controllers

Models		GV-AS100 / 110 / 120	GV-AS1010	GV-AS1110	GV-AS210 / 2110 / 2120 / 2121 / 410 / 4110 / 810 / 8110 (Control Panel & Kit)	GV-EV48	GV-CS1320
Built-in Reader		O	O	O	X	X	O
ID Formats Supported by Built-in Reader		UID	GID / UID	GID / UID	X	X	GID / UID
<b>Supported Interfaces for Readers</b>							
Wiegand		O	X	X	O	X	X
RS-485		O	O	X	O	O	O
TCP/IP		O (With GV-ASBox / ASNet)	O	O	O	O	O
<b>Compatibility with Readers</b>							
GV Readers	GV-Reader 1251	X	X	X	O (Wiegand / RS-485)	O (RS-485)	X
	GV-Reader 1352 V2 / GV-R1352 / GV-RK1352 / GV-DFR1352	O (Wiegand / RS-485) <sup>(1)</sup>	O (RS-485)	X	O (Wiegand / RS-485)	O (RS-485)	O (RS-485)
	GV-CR420	O (Wiegand / RS-485 / TCP / IP) <sup>(1)</sup>	O (RS-485 / TCP/IP)	O (TCP/IP)	O (Wiegand / RS-485 / TCP/IP)	O (RS-485 / TCP/IP)	O (RS-485 / TCP/IP)
	GV-GF1911 / 1912		X	X	O (Wiegand / RS-485 / TCP/IP)	O (RS-485 / TCP/IP)	X
	GV-GF1921 / 1922	O (TCP/IP)					
	GV-PCR310 Enrollment Reader	X					
HID and Other 3rd Party Readers		O (Wiegand, 26~64 bit format)	X		O (Wiegand, 26~64 bit format)	X	X
<b>Compatibility with Cards</b>							
GV Card & Key Fob	GV-AS ID E Card & Key Fob (125 KHz)	X			See "Compatibility with Cards" of the supported readers below	X	
	GV-AS ID M Card & Key Fob (13.56 MHz)	O				O	
	GV-AS ID F Card & Key Fob (13.56 MHz)	O				O	
HID and Other 3rd Party Card & Key Fob	O <sup>(2)</sup>			O <sup>(2)</sup>			

**Note:**

1. **GV-AS100 / 110 / 120** only supports TCP/IP interface through a GV-ASBox or GV-ASNet. For **GV-AS110 / 120**, a GV-ASBox or GV-ASNet is required to connect to readers through RS-485.
2. Only supports 13.56 MHz for ISO14443A (Mifare DESFire, Mifare Plus and Mifare Classic). If you are using third-party cards or key fobs, the reader must be under UID mode.
3. All specifications are subject to change without notice.



## Compatibility Chart for GV-Readers

Models		GV-Reader 1251	GV-Reader 1352 V2 / GV-DFR1352 / GV-R1352 / GV-RK1352	GV-CR420	GV-GF1911 / 1912	GV-GF1921 / 1922	GV-PCR310 Enrollment Reader
<b>Supported ID Formats</b>		UID only	GV-Reader 1352 V2: UID only GV-R1352 / RK1352 / DFR1352: GID and UID	UID only			
<b>Supported Interfaces for Controllers</b>							
<b>Wiegand</b>				O		X	X
<b>RS485</b>				O		X	X
<b>TCP/IP</b>			X		O		X
<b>USB</b>				X			O
<b>Compatibility with Controllers</b>							
<b>GV-AS Controllers</b>	<b>GV-AS100 / 110 / 120</b>	X	O (Wiegand / RS-485) <sup>(1)</sup>	O <sup>(1)</sup> (Wiegand / RS-485 / TCP/IP)		X	X
	<b>GV-AS1010</b>	X	O (RS-485)	O (RS-485 / TCP/IP)	X	O (TCP/IP)	
	<b>GV-AS1110</b>	X	X	O (TCP/IP)	X	O (TCP/IP)	
	<b>GV-AS210 / 2110 / 2120 / 2121 / 410 / 4110 / 810 / 8110 (Control Panel &amp; Kit)</b>		O (Wiegand / RS-485)	O (Wiegand / RS-485 / TCP/IP)		O (TCP/IP)	
	<b>GV-EV48</b>		O (RS485)	O (RS-485 / TCP/IP)		O (TCP/IP)	
	<b>GV-CS1320</b>	X	O (RS-485)	O (RS-485 / TCP/IP)	X	O (TCP/IP)	
<b>HID and Other 3rd Party Controllers</b>			O (Wiegand) <sup>(2)</sup>			X	



Models		GV-Reader 1251	GV-Reader 1352 V2 / GV-DFR1352 / GV-R1352 / GV-RK1352	GV-CR420	GV-GF1911 / 1912	GV-GF1921 / 1922	GV-PCR310 Enrollment Reader
<b>Compatibility with Cards</b>							
GV Card & Key Fob	GV-AS ID E Card & Key Fob (125 KHz)	○			X		
	GV-AS ID M Card & Key Fob (13.56 MHz)	X			○		
	GV-AS ID F Card & Key Fob (13.56 MHz)						
HID and Other 3rd Party Card & Key Fob		○ <sup>(3)</sup>			○ <sup>(4)</sup>		

**Note:**

1. **GV-AS100 / 110 / 120** only supports TCP/IP interface through a GV-ASBox or GV-ASNet. For **GV-AS110 / 120**, a GV-ASBox or GV-ASNet is required to connect to readers through RS-485.
2. **GV-Reader 1251 / 1352 V2** supports Wiegand 26~40 bits; **GV-R1352 / RK1352 / DFR1352** supports Wiegand 26 / 34 bits; **GV-CR420 / GF1911 / GF1912** supports Wiegand 26 bits only.
3. Only supports 125 KHz (Proximity EM Card). If you are using third-party cards or key fobs, the reader must be under UID mode.
4. Only supports 13.56 MHz for ISO14443A (Mifare DESFire, Mifare Plus and Mifare Classic). **GV-Reader 1352 V2 / GV-PCR310** supports Mifare Classic only.
5. All specifications are subject to change.



## Number of Readers Supported by GV-AS Controllers

### GV-Reader 1352 V2 / GV-R1352 / GV-RK1352 / GV-DFR1352

GV-AS Controllers	Wiegand	RS-485	TCP/IP
GV-AS100	1	1	Readers listed do not support TCP/IP
GV-AS110 / 120	1	Not supported	
GV-AS1010	Not supported	2	
GV-AS1110	Not supported	Not supported	
GV-AS100 / 110 / 120 with GV-ASBox	2	4	
GV-AS100 / 110 / 120 with GV-ASNet	Not supported	2	
GV-AS210 / 2110 / 2120 / 2121 Kit	4	8	
GV-AS410 / 4110 Control Panel & Kit	8	8	
GV-AS810 / 8110 Control Panel & Kit	8	16	
GV-EV48	Not supported	2	
GV-CS1320	Not supported	2	

### GV-Reader 1251

GV-AS Controllers	Wiegand	RS-485	TCP/IP
GV-AS100 / 110 / 120 / 1010 / 1110	Not supported	Not supported	Readers listed do not support TCP/IP
GV-AS100 / 110 / 120 with GV-ASBox	Not supported	Not supported	
GV-AS100 / 110 / 120 with GV-ASNet	Not supported	Not supported	
GV-AS210 / 2110 / 2120 / 2121 Kit	4	8	
GV-AS410 / 4110 Control Panel & Kit	8	8	
GV-AS810 / 8110 Control Panel & Kit	8	16	
GV-EV48	Not supported	2	
GV-CS1320	Not supported	Not supported	



### GV-CR420

	Wiegand	RS-485	TCP/IP
GV-AS100	1	1	Not supported
GV-AS110 / 120	1	Not supported	Not supported
GV-AS1010	Not supported	2	2
GV-AS1110	Not supported	Not supported	2
GV-AS100 / 110 / 120 with GV-ASBox	2	4	4
GV-AS100 / 110 / 120 with GV-ASNet	Not supported	2	2
GV-AS210 / 2110 / 2120 / 2121 Kit	4	8	8
GV-AS410 / 4110 Control Panel & Kit	8	8	8
GV-AS810 / 8110 Control Panel & Kit	8	16	16
GV-EV48	Not supported	2	2
GV-CS1320	Not supported	2	2

### GV-GF1911 / GV-GF1912

	Wiegand	RS-485	TCP/IP
GV-AS100	1	1	Not supported
GV-AS110 / 120	1	Not supported	Not supported
GV-AS1010 / 1110	Not supported	Not supported	Not supported
GV-AS100 / 110 / 120 with GV-ASBox	2	4	4
GV-AS100 / 110 / 120 with GV-ASNet	Not supported	2	2
GV-AS210 / 2110 / 2120 / 2121 Kit	4	8	8
GV-AS410 / 4110 Control Panel & Kit	8	8	8
GV-AS810 / 8110 Control Panel & Kit	8	16	16
GV-EV48	Not supported	2	2
GV-CS1320	Not supported	Not supported	Not supported



**GV-GF1921 / GV-GF1922**

	<b>Wiegand</b>	<b>RS-485</b>	<b>TCP/IP</b>
<b>GV-AS100</b>	Readers listed do not support Wiegand	Readers listed do not support RS-485	Not supported
<b>GV-AS110 / 120</b>			Not supported
<b>GV-AS1010</b>			2
<b>GV-AS1110</b>			2
<b>GV-AS100 / 110 / 120 with GV-ASBox</b>			Not supported
<b>GV-AS100 / 110 / 120 with GV-ASNet</b>			Not supported
<b>GV-AS210 / 2110 / 2120 / 2121 Kit</b>			8
<b>GV-AS410 / 4110 Control Panel &amp; Kit</b>			8
<b>GV-AS810 / 8110 Control Panel &amp; Kit</b>			16
<b>GV-EV48</b>			2
<b>GV-CS1320</b>			2